

TUSCAN FOOT BLOCK




TUSCAN
MANUFACTURING

INSTALLATION INSTRUCTIONS


STEP 1

Determine distance from bottom of rail to finished deck surface.
NOTE: Min.. height 2", Max height 3³/₄"

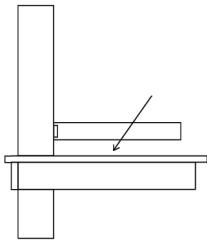


STEP 2

With bottom rail set in place, find the center of rail and mark. Using a square, mark the deck surface so both marks are plumb.

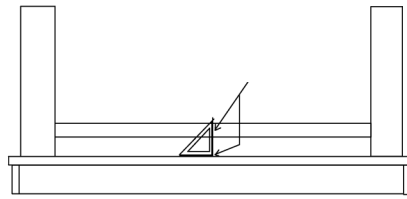

STEP 3


Determine the center of bottom rail and mark. Mark finished deck surface so both marks are aligned.

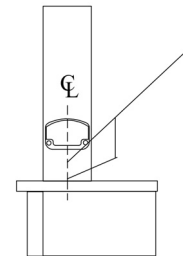

STEP 4


With center of rail and finished deck marked, drill a 1/8" hole and install the four prong mounting plate to the deck and foot block to bottom rail using #10 x 3/4" S.S. screws.

NOTE: Make sure foot block is compressed down to 2" and height adjustment catches are facing mounting post.

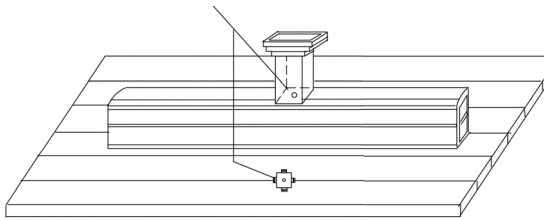

STEP 5

With foot block and four prong mounting plate in place, mount bottom rail in place to predetermine height in Step 1. With bottom rail in place, pull foot block down and snap into four prong mounting plate. Measure up 1-5/8" from deck on foot block and drill a 1/8" hole (inside of railing). Insert a #10 x 3/4" S.S. screw and snap cover over screw head.

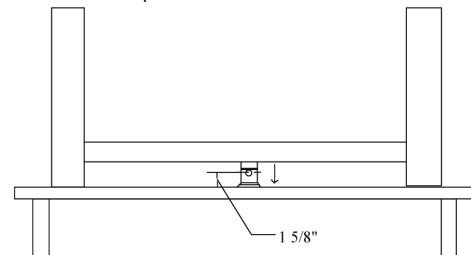

Height Adjustment

Dimensions

