




# 45° CORNER APPLICATION

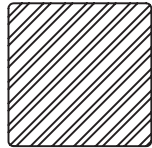


## INSTALLATION TIP

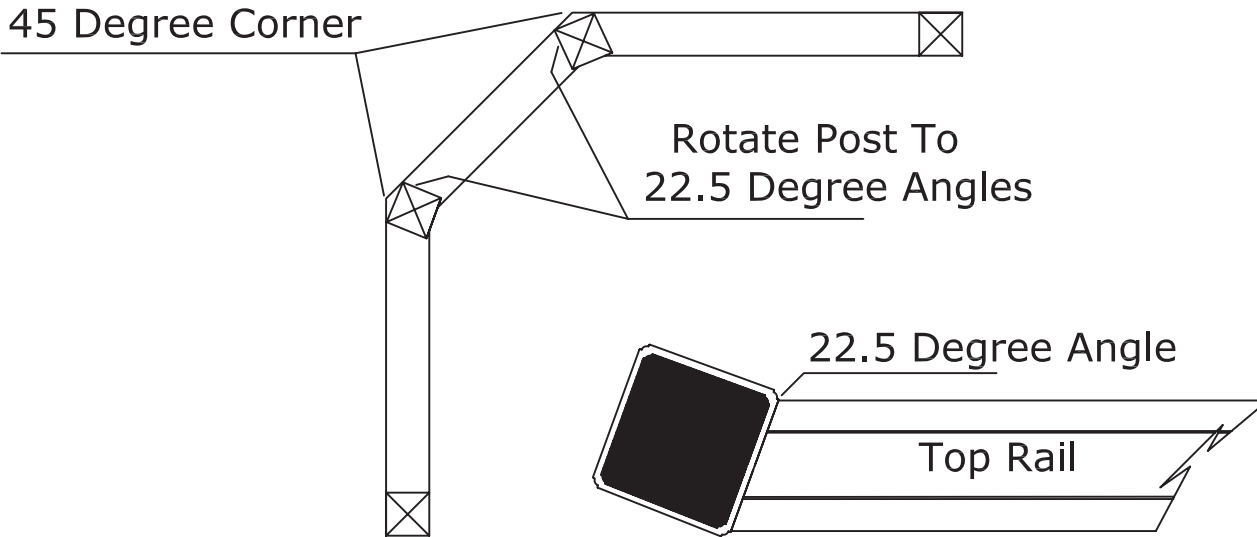

Wood 4x4 Post

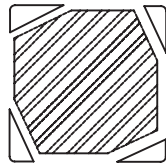

Set small piece of Post Sleeve @ 22.5 degree angle & mark top of post. Extend vertical lines on sides of post. Clip corners off post with saw.

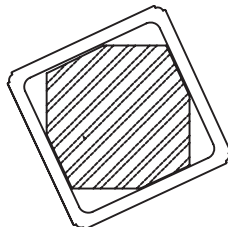

Slide post sleeve over wood post.